

Archos 504 Screen Replacement Instructions

Tools needed: one micro Philips (+) screwdriver and one micro flat (-) screwdriver

Remove the two screws located on the player side **opposite** of the functions keys and speaker with the Philips (+) micro screwdriver. See figure (a.)

Figure (a.)



Place your hand on the outside of the player's corners and use the flat (-) micro screwdriver to pry open the player face. Lift the player face up as shown in Figure (b.) **CAUTION:** Be very careful lifting the face casing, as the screen is located directly under this case and can be damaged by pressure. **DO NOT** place hands on top of player to get the face open.

Figure (b.)



With the face casing in the up position, gently lift the screen up exposing the Circuit board and two leads connecting the screen to the board. The first lead to unattach is the small lead. It is attached by a very small lock case mechanism that has to be unlocked and opens much in the same way as the player face. Take the flat (-) micro screwdriver and gently pry up the small casing lock As shown below in figure (c.) Once the casing is up slide the small lead out (installation will be the exact opposite)

Figure (c.)



The final step to removal is the big lead located to the immediate left of the small lead. Take the flat (-) micro screwdriver and gently push the black strip away from the light color plastic lead housing. This releases the big lead to be gently removed. See figure (d.)

Figure (d.)



The 504 screen can now be safely removed from the player. Installation will be the reverse of the removal instructions.