

## **AV500 LCD Screen Removal & Installation Instructions**

Tools required: one micro (+) screwdriver and one G 4 torx tool

Step 1.

Remove battery from your player as shown below in figure (1.)



Figure (1.)

Step 2.

Remove the two torx screws located on the left top and bottom of the player with the G 4 torx tool. Next remove the two (+) screws located on the right side of the player. See figure (2.)



Figure (2.)

Step 3.

Proceed with caution & gently pry the right top front side of the player up shown in figure (3.)



Step 4.

The two hook fasteners are now visible and can be gently unhooked. Simply slide your finger up under the clasp and unhook it. Be very careful here, too much force and the clasp can break! See figure (4.)



Figure (4.)

Step 5.

Once you have the clasp unhooked you can pull the face of the player away from the bottom enough to see and remove the speaker that is wired to the bottom part but housed in a cavity in the top section. Gently open the face wide enough to retrieve the speaker from its slot. Now the only thing connecting the face to the bottom is the LCD Screen connecting lead. Please see below figure (5.)



Figure (5.)

### Step 6.

Now you can open the face totally, remember that it is still attached to the player via the LCD screen lead. The LCD Screen lead wire is located on the circuit board in the bottom of the player. To remove the lead, flip up the connector tab as shown in figure (6.) and slide the lead back away from the connector. The screen and face are now totally separated from the player as shown in figure (7.)



Figure (6.)



Figure (7.)



### Step 7.

Now to remove the LCD screen from the face plate, remove the secure tape from the back of the screen as shown in figure (8.)



Figure (8.)



Step 8.

Apply consistent pressure by pushing the screen out evenly around the face plate. Be careful not to exert too much pressure on the face plate frame itself, as this will cause it to bend making installation difficult. Please see figure (9.)



Figure (9.)

Step 9.

The consistent pressure will loosen the screen enough for removal. See figure (10.)



Figure (10.)

To install your new screen simply reverse the removal instructions.